



STEAMSHINE™ MONTHLY MAINTENANCE **and CLEANING PROCEDURE**

1. Turn off and unplug the unit.
2. Let the unit cool off completely.
3. Open the Air Release Valve by sliding upwards the small metal sliderlock on the metal portion of the handle, and the Fill Valve.
4. Tip the unit on its back with the air release valve toward the plugged sink or white bucket.
5. Allow all the water to drain out through the Air Release Valve.
6. If the drained water is not completely clean and clear, fill the unit with warm water, rinse, and repeat steps **3** through **5** until the rinse water is completely clean and clear.
If the water is very contaminated, clean the unit bimonthly.
7. Return the Steamshine™ to the upright position, and fill it by following the instructions under Daily Fill Procedure.
8. For best results, send your Steamshine™ unit to the factory for the yearly cleaning, testing, and tune-up.

WARNING: Turning the unit upside down or any other than recommended position may bring the contaminants into the valves!